



This User's Guide & Technical Reference is for assisting system manufacturers and end-users in setting up and installing the mainboard.

Every effort has been made to ensure that the information in this manual is accurate. Soltek Computer Inc. is not responsible for printing or clerical errors. Information in this document is subject to change without notice and does not represent a commitment on the part of Soltek Computer Inc.

No part of this manual may be reproduced, transmitted, translated into any language in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of Soltek Computer Inc.

Companies and products mentioned in this manual are for identification purpose only. Product names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies.

Soltek computer inc. Provides this manual "As is " without warranty of any kind, either express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall Soltek computer inc. Be liable for any loss or profits, loss of business, loss of use or data, interruption of business, or for indirect, special, incidental, or consequential damages of any kind, even if Soltek computer inc. Has been advised of the possibility of such damages arising from any defect or error in this manual or product.

© Copyright 1999 Soltek Computer Inc.
All rights reserved.

Model : SL-63AV+
Edition : March 2000
Version : 2.0

<http://www.soltek.com.tw>
e-mail: support@soltek.com.tw

CONTENT

MOTHERBOARD DIAGRAM	5
JP3 / JP4: Bus Clock Select	9
STANDARD CMOS SETUP	12
BIOS FEATURES SETUP	14
CHIPSET FEATURES SETUP	18
POWER MANAGEMENT SETUP	21
PnP/PCI CONFIGURATION SETUP	25
LOAD SETUP DEFAULTS	28
CPU SPEED SETTING	29
INTEGRATED PERIPHERALS.....	31
SUPERVISOR/USER PASSWORD.....	35
IDE HDD AUTO DETECTION	36
SAVE & EXIT SETUP	36
EXIT WITHOUT SAVING	36
Appendix A	
FLASH MEMORY UPDATE INSTALLATION	37
Appendix B	
DRIVER INSTALLATION	38

Appendix C

THERMAL SENSOR CONNECTOR 40

SL-63AV⁺

VIA APOLLO PRO133 SOCKET-370

F E A T U R E

■ PROCESSOR

- Supports Intel PPGA Celeron 370 CPUs 300 ~ 533MHz or higher.
- Supports Intel FC-PGA Pentium III (Coppermine) CPUs 500E ~ 750 MHz or higher.
- Supports Cyrix Joshua CPUs.
- Supports 66/ 75*/ 83*/ 100/ 103*/ 105*/ 124*/ 133/ 140*/ 150*MHz system bus speeds.
- Clock multipliers up to 8x.

■ CHIPSET

- VIA APOLLO PRO133 VT82C693A chipset (FSB supports 133MHz).

■ SYSTEM MEMORY

- 3x 3.3V DIMM sockets.
- 8MB to 768MB DRAM size.

■ SLOT

- 1x AGP slot supports 1x / 2x mode bus; 4x PCI Bus Master slots; 2x ISA slots.

■ ONBOARD I/O

- 2x Ultra ATA33/66 Bus Master IDE ports.
- 2x USB ports.
- 1x PS/2 mouse connector and 1x PS/2 keyboard connector.
- 1x 2.88MB Floppy port, 2x High Speed 16550A UART ports and 1x IrDA TX / RX Header.

■ POWER

- AT / ATX power supply connector.
- Power-On by LAN(WOL), RTC Alarm, Modem Ring.

■ BIOS

- 2MB FLASH BIOS.
- Licensed AWARD BIOS, supports SCSI / ZIP / LS-120 / CD-ROM boot and ACPI Power Management.

■ FORM FACTOR / PCB

- AT, 4 layers PCB, 22.0cm x 24.0cm size.

C P U C L O C K S E T T I N G

CPU Type Configuration

CPU MODEL	BUS RATIO	BUS CLOCK
Pentium III 533EB/133# (133MHz * 4.0x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 300/66 (66MHz * 4.5x) Pentium III 600EB/133# (133MHz * 4.5x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 333/66 (66MHz * 5.0x) Pentium III 500E/100# (100MHz * 5.0x) Pentium III 667B/133# (133MHz * 5.0x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 366/66 (66MHz * 5.5x) Pentium III 550E/100# (100MHz * 5.5x) Pentium III 733B/133# (133MHz * 5.5x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 400/66 (66MHz * 6.0x) Pentium III 600E/100# (100MHz * 6.0x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 433/66 (66MHz * 6.5x) Pentium III 650/100# (100MHz * 6.5x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 466/66 (66MHz * 7.0x) Pentium III 700/100# (100MHz * 7.0x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 500/66 (66MHz * 7.5x) Pentium III 750/100# (100MHz * 7.5x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3
Celeron 533/66 (66MHz * 8.0x)	JP13  3 JP14  3 JP15  3 JP16  3	JP3  3 JP4  3

NOTE 1: Use jumper(hardware) settings > set JP13/JP14
JP15/JP16 manually.


NOTE 2: Use jumperless settings > JP13/JP14/JP15/JP16
must set to DEFAULT, that means all JP13/JP14/
JP15/JP16 are 1 & 2 short.

NOTE 3: (#) Pentium III Coppermin FC-PGA CPUs.

Bus Ratio Select

BUS RATIO	JP13~JP16	BUS RATIO	JP13~JP16
2.0x	JP13 1		

J U M P E R S E T T I N G

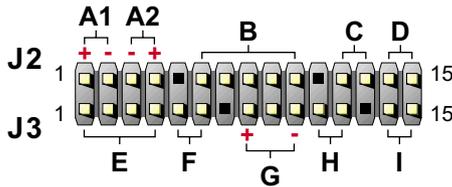

- | | |
|------------------------|-------------------|
| A1 : 1st HDD LED | A2 : 2nd HDD LED |
| B. : INFRARED (IR) | C. : POWER SWITCH |
| D. : SUSPEND CONNECTOR | E. : SPEAKER |
| F. : RESET SWITCH | G. : POWER LED |
| H. : KEYLOCK | I. : SUSPEND LED |

#FAN1: Onboard FAN (12V) Connector

#FAN1	FUNCTION
CFAN1	CPU FAN
SFAN1	CHASSIS FAN
PFAN1	POWER FAN

JP3 / JP4: Bus Clock Select

Bus Clock	JP3 / JP4
100MHz	 JP3 JP4 1 3
133MHz	 JP3 JP4 1 3
Auto Select 66/100/133MHz (default)	 JP3 JP4 1 3

JP11 / JP12: USB Port Select

USB Port	JP11 / JP12
Redirect USB port1 to USB connector (default)	 JP11 JP12
Redirect USB port1 to AGP port	 JP11 JP12

JP18 / JP19 / JP20: Intel / Cyrix CPU Select

CPU TYPE	JP18	JP19	JP20
Intel CPU (Default)			
Cyrix Joshua CPU			

JVGA1: VGA Card

This jumper is set for the PCI VGA card only. Open this jumper when the system is not able to boot up. If you use AGP card, it is important to set default with JVGA1.

	JVGA1
For PCI VGA card	
Normal (default)	

JBAT1: Clear CMOS data

Clear the CMOS memory by shorting this jumper 2 & 3 momentarily, and then remove the cap back to 1 & 2 to retain original CMOS setting.

CMOS Status	JBAT1
Clear CMOS Data	 1 3
Retain Data (default)	 1 3

KB1: Keyboard Connector**MS1: PS/2 mouse Connector****USB: USB Connector****JWOL1: Wake On LAN (WOL) Connector**

This jumper is designed to use LAN to boot up the system. Connect the wake on signal from LAN card to this connector.

For support WOL, the ATX power supply has to have at least 5V/720mA standby current.

NOTE: “VIA Patch Code”, “VIA AGP VxD Driver” & “VIA PCI IRQ Routing Miniport” installation, please refer to Appendix B.

This VIA82C693A chipset Apollo Pro-Plus comes with the AWARD BIOS from AWARD Software Inc. Enter the AWARD BIOS program Main Menu by:

1. Turn on or reboot the system. After a series of diagnostic checks, the following message will appear:

PRESS TO ENTER SETUP

2. Press the key and the main program screen will appear as follows:
3. Using the arrows on your keyboard, select an option, and press <Enter>. Modify the system parameter to reflect the options installed in your system.
4. You may return to the Main Menu anytime by pressing <ESC>.
5. In the Main Menu, "SAVE AND EXIT SETUP" saves your changes and reboots the system, and "EXIT WITHOUT SAVING" ignores your changes and exits the program.

ROM PCI / ISA BIOS (2A6LJSN9)
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	CPU SPEED SETTING
BIOS FEATURES SETUP	INTEGRATED PERIPHERALS
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD
POWER MANAGEMENT SETUP	USER PASSWORD
PNP/PCI CONFIGURATION	IDE HDD AUTO DETECTION
LOAD SETUP DEFAULTS	SAVE & EXIT SETUP
	EXIT WITHOUT SAVING
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color

STANDARD CMOS SETUP

Standard CMOS Setup allows you to record some basic system hardware configuration and set the system clock and error handling. You only need to modify the configuration values of this option when you change your system hardware configuration or the configuration stored in the CMOS memory gets lost or damaged.

Run the Standard CMOS Setup as follows:

1. Choose "STANDARD CMOS SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A69KSNH)
STANDARD CMOS SETUP
AWARD SOFTWARE, INC.

Date (mm:dd:yy) : Tue, Oct 19 1999	
Time (hh:mm:ss) : 15 : 6 : 26	
HARD DISK	TYPE SIZE CYLS HEAD PRECOMP LANDZ SECTOR MODE
<hr/>	
Primary Master	: Auto 0M 0 0 0 0 0 AUTO
Primary Slave	: Auto 0M 0 0 0 0 0 AUTO
Secondary Master	: Auto 0M 0 0 0 0 0 AUTO
Secondary Slave	: Auto 0M 0 0 0 0 0 AUTO
Drive A	: 1.44, 3.5 in.
Drive B	: None
Video	: EGA/VGA
Halt On	: All Errors
Base Memory : 640K Extended Memory : 64512K Other Memory : 384K <hr/> Total Memory : 65536K	
Esc : Quit	↑ ↓ → ← : Select Item
F1 : Help	(Shift) F2 : Change Color
	PU/PD/+/- : Modify

Date (mm:dd:yy) Time (hh:mm:ss)	Set the current date and time.
Primary (Secondary) Master / Slave	This field records the specification for all non-SCSI Hard Disk Drives installed in your system. Refer to the respective documentation on how to install the drives.
Drive A / B	Set the field to the type(s) of Floppy Disk drive(s) installed in your system. The choice: 360KB, 5.25in. 1.2MB, 5.25in. 720KB, 3.5in. 1.44MB, 3.5in. 2.88MB, 3.5in.
Video	Set the field to the type of video display card installed in your system. The choice: Monochrome, Color 40x25, EGA / VGA, (default) Color 80x25
Halt On	Set this warning feature for the type of errors that will cause the system to halt. The choice: All Errors, (defaults) No Errors, All But Keyboard, All But Diskette, All But Disk / Key

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

BIOS FEATURES SETUP

BIOS Features Setup allows you to improve your system performance or set up system features according to your preference.

Run the BIOS Features Setup as follows:

1. Choose “BIOS FEATURES SETUP” from the Main Menu and a screen with a list of options will appear.

ROM PCI/ISA BIOS (2A6LJSN9)
 BIOS FEATURES SETUP
 AWARD SOFTWARE, INC.

Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000-CFFFF Shadow	: Disabled
CPU L2 Cache ECC Checking	: Enabled	D0000-D3FFF Shadow	: Disabled
		D4000-D7FFF Shadow	: Disabled
Quick Power On Self Test	: Enabled	D8000-DBFFF Shadow	: Disabled
Boot Sequence	: A,C,SCSI	DC000-DFFFF Shadow	: Disabled
Swap Floppy Drive	: Disabled		
Boot Up Floppy Seek	: Disabled		
Boot Up NumLock Status	: On		
IDE HDD Block Mode	: Enabled		
Gate A20 Option	: Fast		
Memory Parity/ECC Check	: Disabled		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250	ESC : Quit	↑ ↓ → ← : Select Item
Security Option	: Setup	F1 : Help	PU/PD/+/- : Modify
PCI/VGA Palette Snoop	: Disabled	F5 : Old Value	(Shift)F2 : Color
OS Select For DRAM > 64MB	: Non-OS2	F7 : Load Setup Defaults	

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys. An explanation of the <F>keys follows:

<F1>: “Help” gives options available for each item.

<Shift> + <F2>: Change BIOS screen color.

<F5>: Get the previous values. These values are the values with the user started in the current session.

<F6>: Load all options with the BIOS default values.

<F7>: Load all options with the Setup default values.

Virus Warning	<p>Enabled: Activates automatically when the system boots up causing a warning message to appear if there is anything attempting to access the boot sector or Hard Disk partition table.</p> <p>Disabled: No warning message will appear when there is something attempting to access the boot sector or Hard Disk partition table.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"><p><i>Note: Many diagnostic (or boot manager) programs which attempt to access the boot sector table can cause the above warning message. If you will be running such a program, we recommend that you disable the virus protection first.</i></p></div>
CPU Internal Cache	<p>Choose Enabled (default) or Disabled. This option allows user to enable or disable the CPU internal cache.</p>
External Cache	<p>Choose Enabled (default) or Disabled. This option allows user to enable or disable the external cache memory.</p>
CPU L2 Cache ECC Checking	<p>Choose Enabled (default) or Disabled.</p>
Quick Power On Self Test	<p>Choose Enabled (default) or Disabled. This option allows user to speed up the Power-On-Self-Test routine.</p>
Boot Sequence	<p>Default is "A , C, SCSI". This option determines which drive to boot at first for an operating system.</p>
Swap Floppy Drive	<p>This option swaps floppy driver assignments when it's enabled. The choice: Enabled, Disabled (default).</p>
Boot Up Floppy Seek	<p>Enabled (default): During POST, BIOS checks the track number for Floppy Disk drive to see whether it's 40 or 80 tracks.</p> <p>Disabled: During POST, BIOS will not check the track number for Floppy Disk drive.</p>

Boot Up NumLock Status	On (default): Activate the NumLock function at boot up. Off: Close the NumLock function at boot up.
IDE HDD Block Mode	Choose Enabled (default) or Disabled. If your Hard Disk size is larger than 540MB, choose Enabled, and if you are using the IDE HDD Auto Detection option, the BIOS will choose this option automatically. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">Note: Some older model Hard Disk drives do not provide this function.</div>
Gate A20 Option	Choose Normal or Fast (default): This option allows the RAM to access the memory above 1MB by using the fast gate A20 line.
Memory Parity / ECC Check	Choose Enabled or Disabled.
Typematic Rate Setting	Choose Enabled or Disabled (default): Enable this option to adjust the deystroke repeat rate.
Typematic Rate (Char / Sec)	Range between 6 (default) and 30 characters per second. This option controls the speed of repeating keystrokes.
Typematic Delay (Msec)	Choose 250 (default), 500, 750 and 1000. This option sets the time interval for displaying the first and the second characters.
Security Option	Choose System or Setup (default). This option prevents unauthorized system boot up or use of BIOS Setup.
PCI / VGA Palette	Choose Enabled or Disabled (default). It determines whether or not the MPEG ISA cards can work with PCI / AGP.
OS Select for DRAM > 64MB	Non-OS2 (default): For Non-OS/2 operating system. OS: For OS/2 operating system.

Video BIOS Shadow

Enabled (default): Map the VGA BIOS to system RAM.
Disabled: Don't map the VGA BIOS to system RAM.

**C8000-CBFFF to DC000-
DFFFF Shadow**

These options are used to shadow other expansion card ROMs.

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

CHIPSET FEATURES SETUP

Chipset Features Setup changes the values of the chipset registers. These registers control the system options.

Run the Chipset Features Setup as follows:

1. Choose "CHIPSET FEATURES SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LJSN9)
 CHIPSET FEATURES SETUP
 AWARD SOFTWARE, INC.

Bank 0/1 DRAM Timing : SDRAM 10ns Bank 2/3 DRAM Timing : SDRAM 10ns Bank 4/5 DRAM Timing : SDRAM 10ns SDRAM Cycle Length : 3 DRAM Clock : Host CLK Memory Hole : Disabled Read Around Write : Enabled Concurrent PCI/Host : Disabled System BIOS Cacheable : Disabled Video RAM Cacheable : Disabled AGP Aperture Size : 64M AGP-2X Mode : Disabled OnChip USB : Enabled USB Keyboard Support : Disabled	ESC : Quit ↑ ↓ → ← : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Value (Shift)F2 : Color F7 : Load Setup Defaults
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------

Bank 0/1 2/3 4/5 DRAM Timing	<p>This item allows you to select the value in this field, depending on whether the board has paged DRAMs or EDO (extended data output) DRAMs.</p> <p>The choice: EDO 50ns, EDO 60ns, Slow, Medium, Fast, Turbo</p>
SDRAM Cycle Length	<p>You can select CAS latency time in HCLKs of 2/2 or 3/3. The system board designer should have set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU.</p>
DRAM CLOCK	<p>The setting of this item must depend on the spec of PC100/PC133. For example, if user chooses HCLK + 33M, that means not only the motherboard but also the SDRAM needs to comply with PC-133 spec.</p> <p>Choice: Host CLK(default), HCLK-33M or HCLK+33M.</p>
Memory Hole	<p>Choose Enabled or Disabled (default). In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory's space below 16MB.</p>
Read Around Write	<p>DRAM optimization feature: If a memory read is addressed to a location whose latest write is being held in a buffer before being written to memory, the read is satisfied through the buffer contents, and the read is not sent to the DRAM.</p> <p>The choice: Enabled, Disabled</p>
Concurrent PCI / Host	<p>When disabled, CPU bus will be occupied during the entire PCI operation period.</p> <p>The choice: Enabled, Disabled</p>
System BIOS Cacheable	<p>Choose Enabled or Disabled (default). When Enabled, the access to the system BIOS ROM addressed at F0000H-FFFFFH is cached.</p>

Video RAM Cacheable Choose Enabled or Disabled (default). When enabled, the access to the VGA RAM addressed is cached.

AGP Aperture Size (MB) Choose 4, 8, 16, 32, 64 (default), 128 or 256MB. Memory map and graphics data structures can reside in a Graphics Aperture. This area is like a linear buffer. BIOS will automatically report the starting address of this buffer to the O.S.

AGP-2X Mode This item allows user to enable / disable the AGP-2x (133MHz clock) mode.

OnChip USB This should be enabled if your system has a USB installed on the system board and you wish to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.
The choice:
Enabled, Disabled

USB Keyboard Support Enabled: Enables function when the USB keyboard is being used.
Disabled (default): When the AT keyboard is being used.

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

POWER MANAGEMENT SETUP

Power Management Setup changes the system power savings function.

Run the Power Management Setup as follows:

1. Choose "POWER MANAGEMENT SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LJSN9)
POWER MANAGEMENT SETUP
AWARD SOFTWARE, INC.

ACPI function	: Disabled	Primary INTR	: ON
Power Management	: User Define	IRQ3 (COM 2)	: Primary
PM Control by APM	: Yes	IRQ4 (COM 1)	: Primary
Video Off After	: Suspend	IRQ5 (LPT 2)	: Primary
Video Off Method	: V/H SYNC+Blank	IRQ6 (Floppy Disk)	: Primary
MODEM Use IRQ	: 3	IRQ7 (LTP 1)	: Primary
Soft-Off by PWRBTN	: Instant-Off	IRQ8 (RTC Alarm)	: Disabled
HDD Power Down	: Disabled	IRQ9 (IRQ2 Redir)	: Secondary
Doze Mode	: Disabled	IRQ10 (Reserved)	: Secondary
Suspend Mode	: Disabled	IRQ11 (Reserved)	: Secondary
** PM Events **		IRQ12 (PS/2 Mouse)	: Primary
VGA	: OFF	IRQ13 (Coprprocessor)	: Primary
LPT & COM	: LPT/COM	IRQ14 (Hard Disk)	: Primary
HDD & FDD	: ON	IRQ15 (Reserved)	: Disabled
DMA Master	: OFF		
Modem Ring Resume	: Disabled	ESC : Quit	↑ ↓ → ← : Select Item
Wake Up On LAN	: Disabled	F1 : Help	PU/PD/+/- : Modify
RTC Alarm Resume	: Disabled	F5 : Old Value (Shift)F2	: Color
		F7 : Load Setup Defaults	

ACPI Function	Enabled: Turn on ACPI function. Disabled (default): Turn off ACPI function.
Power Management	Choose Max. Saving, User Define (default), Disabled, or Min. Saving.
PM Control By APM	Choose Yes (default) or No. You need to choose Yes when the operating system has the APM functions, otherwise choose No.
Video Off After	Choose NA, Suspend, Standby (default) or Doze.
Video Off Method	Choose Blank, DPMS or V/H Sync+Blank (default). You can choose either DPMS or V/H Sync+Blank when the monitor has the Green function. You need to choose Blank when the monitor has neither the Green function.
Modem Use IRQ	Assign the IRQ number to the modem which is being used so that the ring signal can wake up the system. The default setting is 3 (COM2).
Soft-Off By PWR-BTTN	Instant-Off (default): Turn off the system power at once after pushing the power button. Delay 4 Sec: Turn off the system power 4 seconds after pushing the power button (to meet PC97/98 spec)
HDD Power Down	Time is adjustable from 1 to 15 minutes. When the set time has elapsed, the BIOS sends a command to the HDD to power down which turns off the motor.
Doze Mode	This mode sets the CPU speed down to 33MHz.
Suspend Mode	The option allows you to choose the mode for the different timer. The Suspend mode turns off the CPU and saves the energy of the system.

VGA	When On of VGA, any activity from one of the listed system peripheral devices or IRQs wakes up the system. Choice: On(default), Off.
LPT & COM	When On of LPT&COM, any activity from one of the listed system peripheral devices or IRQs wakes up the system. Choice: LPT/COM(default), NONE, LPT or COM.
HDD & FDD	When On of HDD&FDD, any activity from one of the listed system peripheral devices wakes up the system. Choice: On(default), Off.
DMA / master	When On, any activity from one of the listed system peripheral devices wakes up the system. Choice: On, Off(default).
Modem Ring Resume	An input signal on the serial Ring Indicator (RI) Line (in other words, an incoming call on the modem) awakens the system from a soft off state.
Wake On LAN	Enabled: Wake on the system from the LAN card (LAN card must support wake on LAN function and the power supply must provide at least 5V/7750mA standby current) Disabled(default): Disable Wake On LAN function.
RTC Alarm Resume	When Enabled, you can set the date and time at the which the RTC(Real Time Clock) alarm awakens the system from suspend mode. Choice: Disabled(default), Enabled.
Primary INTR	When set to On, any event occurring at will awaken a system which has been powered down. On(default): The system can not enter the power saving mode when I/O ports or IRQ# is activated. Off: The system still can enter the power saving mode when I/O ports or IRQ# is activated.

The following is a list of IRQ's(Interrupt ReQuests), which can be exempted much as the COM ports and LPT ports above can. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service. When set On, activity will neither prevent the system from going into a power management mode nor awaken it.

- IRQ3 (COM2)**
- IRQ4 (COM1)**
- IRQ5 (LPT2)**
- IRQ6 (Floppy Disk)**
- IRQ7 (LPT1)**
- IRQ8 (RTC Alarm)**

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

PnP/PCI CONFIGURATION SETUP

PnP/PCI Configuration Setup defines PCI bus slots.

Run the PnP/PCI Configuration Setup as follows:

1. Choose "PnP/PCI CONFIGURATION SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LJSN9)
PNP/PCI CONFIGURATION
AWARD SOFTWARE, INC.

PNP OS Installed : No Resources Controlled By : Auto Reset Configuration Data : Disabled	CPU to PCI Write Buffer : Enabled PCI Dynamic Bursting : Enabled PCI Master 0 WS Write : Enabled PCI Delay Transaction : Enabled PCI#2 Access #1 Retry : Disabled AGP Master 1 WS Write : Disabled AGP Master 1 WS Read : Disabled IRQ-x assigned to : PCI/ISA PnP DMA-x assigned to : PCI/ISA PnP Assign IRQ For USB : Enabled Assign IRQ For VGA : Enabled
ESC : Quit ↑ ↓ → ← : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Value (Shift)F2 : Color F7 : Load Setup Defaults	

PNP OS Installed

Yes: OS supportsss Plug and Play function.
No (default): OS doesn't support Plug and Play function.

Note: BIOS will automatically diable all PnP resources except the boot device card when you select Yes on Non-PnP O.S.

**Resources Controlled
By**

Choose Manual (default) or Auto. The BIOS checks the IRQ/DMA channel number on the ISA and PCI card manually if you choose Manual. And the IRQ/DMA channel number will be checked automatically if you choose Auto.

**Reset Configuration
Data**

Choose Enabled or Disabled (default). Disable retains Enabled PnP configuration data in BIOS and resets the PnP configuration data in the BIOS.

CPU to PCI Write Buffer

Choose Enabled(default) or Disabled.

PCI Dynamic Bursting

Choose Enabled(default) or Disabled .

PCI Master 0 WS Write

Choose Enabled(default) or Disabled .

PCI Delay Transaction

Choose Enabled(default) or Disabled .

PCI #2 Access #1 Retry

Choose Enabled or Disabled(default).

AGP Master 1 WS Write

Choose Enabled(default) or Disabled.

AGP Master 1 WS Read

Choose Enabled or Disabled(default).

IRQ-x assigned to DMA-x assigned to	Legacy ISA: Manually assigns IRQ/DMA to device. PCI/ISA PnP: BIOS assigns IRQ/DMA to device automatically.
Assign IRQ for USB	Enabled (default): Add one IRQ to USB controller. Disabled: Remove IRQ from USB controller. The system will have extra IRQ for other devices but the USB controller will still not be disabled (only IRQ was removed)
Assign IRQ for VGA	Enabled (default): Add one IRQ to VGA controller. Disabled: Remove IRQ from VGA controller. The system will have extra IRQ for other devices but the VGA controller will still not be disabled (only IRQ will be removed)

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

LOAD SETUP DEFAULTS

Load Setup Defaults option loads the default system values to the system configuration fields. If the CMOS is corrupted the defaults are loaded automatically.

Choose this option and the following message will appear:

“Load Setup Defaults (Y/N)? N”

To use the Setup Defaults, change the prompt to “Y” and press <Enter>.

CPU SPEED SETTING

CPU Speed Setting option allows user to adjust CPU's settings and retain some informations inside computer when it is working.

Run the Integrated Peripherals as follows:

1. Choose "CPU SPEED SETTING" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LGSNI)
CPU SPEED SETUP
AWARD SOFTWARE, INC.

CPU RATIO : X3 Auto Detect DIMM/PCI Clk : Disabled Spread Spectrum : Disabled CPU Host Clock(CPU/PCI) : Default CPU Warning Temperature : Current System Temp. : Current CPU1 Temperature : Current CPU2 Temperature : Current CPUFAN1 Speed : Current CPUFAN2 Speed : Currnet CPUFAN3 Speed : IN0(V) : IN1(V) : IN2(V) : + 5 V : + 12 V : - 12 V : - 5 V :	ESC : Quit ↑ ↓ → ← : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Value (Shift)F2 : Color F7 : Load Setup Defaults
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------

CPU Ratio	Select the CPU Ratio. The choice: 3.0x (default), 3.5x, 4.0x, 4.5x, 5.0x, 5.5x, 6.0x, 6.5x, 7.0x, 7.5x, 8.0x.
Auto Detect DIMM/PCI clk	Choose Disabled (default) or Enabled. The clock generator will turn off the DIMM clock if this slot is empty.
Spread Spectrum	Choose Disabled (default) or Enabled. This function is designed to EMI test only.
CPU Host Clock (CPU/PCI)	Select the CPU Host Clock. The choice: default, 66/33MHz, 75/37MHz, 83/41MHz, 124/31MHz, 133/33MHz, 140/35MHz, 150/37MHz.
Current System Temp.	Shows the temperature of the system.
Current CPU1/2 Temperature	Shows temperature of the CPU.
Current CPUFAN1/2/3 Speed	Shows current speed of the FAN. The fan must provide rotary pulse. (Normally these types of fan have a three-wire connector.)
Voltage	Shows power supply actual voltage value.

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

INTEGRATED PERIPHERALS

Integrated Peripherals option changes the values of the chipset registers. These registers control system options in the computer.

Run the Integrated Peripherals as follows:

1. Choose "INTEGRATED PERIPHERALS" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LGSNI)
INTEGRATED PERIPHERALS
AWARD SOFTWARE, INC.

OnChip IDE Channel0 : Enabled	Onboard Parallel Port : 378/IRQ7
OnChip IDE Channel1 : Enabled	Parallel Port Mode : ECP/EPP
IDE Prefetch Mode : Enabled	ECP Use DMA : 3
Primary Master PIO : Auto	EPP Mode Select : EPP1.7
Primary Slave PIO : Auto	
Secondary Master PIO : Auto	
Secondary Slave PIO : Auto	
Primary Master UDMA : Auto	
Primary Slave UDMA : Auto	
Secondary Master UDMA : Auto	
Secondary Slave UDMA : Auto	
Init Display First : PCI Slot	
KBC input clock : 8MHz	
Onboard FDC Controller : Enabled	
Onboard Serial Port 1 : 3F8/IRQ4	
Onboard Serial Port 2 : 2F8/IRQ3	
UART Mode Select : Standard	ESC : Quit ↑ ↓ → ← : Select Item
UART2 Duplex Mode : Half	F1 : Help PU/PD/+/- : Modify
RxD, TxD Active : Lo, Lo	F5 : Old Value (Shift)F2 : Color
IR Transmission Delay : Disabled	F7 : Load Setup Defaults

OnChip IDE Channel 0 / 1	The chipset contains a PCI IDE interface with support from two IDE channels. Select Enabled to activate the first and/or the second IDE interface. Select Disabled to deactivate an interface, if you install a primary and/or second add-on IDE interface. The choice: Enabled(default), Disabled.
IDE Prefetch Mode	Choose Enable(default), Disabled.
Primary Master/Slave PIO Secondary Master/Slave PIO	Choose Auto (default) or Mode 0~4. The BIOS will detect the HDD mode type automatically when you choose Auto. You need to set to a lower mode than Auto when your hard disk becomes unstable.
Primary Master/Slave UDMA Secondary Master/Slave UDMA	Enabled (default): Turn on the onboard IDE function. Disabled: Turn off the onboard IDE function.
Init Display First	This option allows you to decide to activate PCI Slot or AGP first. Choose PCI Slot(default), AGP.
KBC input clock	Choose 6MHz, 8MHz(default), 12MHz or 16MHz. There might be a compatible problem when it is above 8MHz.
Onboard FDC Controller	Choose Enabled (default) or Disabled. Choose Disabled when you use an ISA card with FDD function, or choose Enabled to use the onboard FDD connector.
Onboard Serial Port1	Choose Auto (default), 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3 or Disabled. Don't set port 1 & 2 to the same value, except when setting at Disabled.
Onboard Serial Port2	Choose Auto (default), 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3 or Disabled.

UART Mode Select Choose Standard (default), HPSIR or ASKIR.

UART2 Duplex Mode Choose Half (default) or Full.

RxD, TxD Active Choose Lo,Lo (default) / Lo,Hi / Hi,Hi / Hi,Lo.

Note: The above 2 options won't work unless UART2 Mode HPSIR/ASKIR is selected.

IR Transmission Delay Enabled: Enable delay when transferring data.
Disabled (default): Disable delay when transferring data.

Onboard Paralle Port Choose the printer I/O address: 378H/IRQ7 (default), 3BCH/IRQ7, 278H/IRQ5 or Disabled.

Parallel Port Mode Choose Normal (default), ECP/EPP, SPP mode. The mode depends on the external device connected to this port.

ECP Mode Use DMA Choose DMA3 (default) or DMA1. Most sound cards use DMA1. Check with your sound card configuration to make sure that there is no conflict with this function.

Note: This option will not be displayed unless the EPP/ECP is selected.

Parallel Port EPP Type

Choose EPP1.7 (default) or EPP1.9. EPP1.9 supports hardware handshake. This setting is dependent upon your EPP device.

Note: The above 2 options will not be displayed unless the EPP/ECP is selected.

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

SUPERVISOR/USER PASSWORD

These two options allow you to set your system passwords. Normally, the supervisor has a higher ability to change the CMOS setup option than the user. The way to set up the passwords for both supervisor and user are as follows:

1. Choose "CHANGE PASSWORD" from the Main Menu and press <Enter>. The following message appears:

"Enter Password:"

2. The first time you run this option, enter your own password up to 8 characters and press <Enter>. The screen doesn't display the entered characters.
3. After you entered the password, the following message appears prompting you to confirm the password:

"Confirm Password:"

4. Enter the same password "exactly" as you just typed again to confirm the password and press <Enter>.
5. Move the cursor to Save & Exit Setup to save the password.
6. If you need to delete the password you entered before, choose the Supervisor Password and press <Enter>. It will delete the password that you had before.
7. Move the cursor to Save & Exit Setup to save the option you did, otherwise the old password will still be there the next time you turn your machine on.
8. Press <ESC> to exit to the Main Menu.

Note: *If you forget or lose the password, the only way to access the system is to clear the CMOS RAM by setting JBAT1. All setup information will be lost and back to default setting. You need to run the BIOS setup program and re-define all settings again.*

IDE HDD AUTO DETECTION

IDE HDD Auto Detection detects the parameters of an IDE Hard Disk drive and automatically enters them to the Standard CMOS Setup screen.

The screen will ask you to select a specific Hard Disk for Primary Master after you selected this option. If you accept a Hard Disk detected by the BIOS, you can enter “Y” to confirm and then press <Enter> to check next Hard Disk. This function allows you to check four Hard Disks and you may press the <ESC> after the <Enter> to skip this function and go back to the Main Menu.

SAVE & EXIT SETUP

Save & Exit Setup allows you to save all modifications you have specified into the CMOS memory. Highlight this option on the Main Menu and the following message appears:

SAVE to CMOS and EXIT (Y/N)? Y

Press <Enter> key to save the configuration changes.

EXIT WITHOUT SAVING

Exit Without Saving allows you to exit the Setup utility without saving the modifications that you have specified. Highlight this option on the Main Menu and following message appears:

Quit Without Saving (Y/N)? N

You may change the prompt to “Y” and press the <Enter> key to leave this option.

APPENDIX A

FLASH MEMORY UPDATE INSTALLATION

1. Download BIOS files and flash utility from your board vendor. They are: awdfash.exe and .bin file.
2. Copy them to bootable diskette and boot from diskette.
3. The diskette cannot include memory manager e.g. emm386.exe, qemm and himem.sys, otherwise there will appear an error message "insufficient memory".
4. Type "awdfash filename(XXXX.bin)".
5. Next screen will ask you save current bios to file or not? Depend on your diskette capacity, choose Y or N for this option.
6. Then screen ask you programming the flash memory now? type Y for this option.
7. Programming finish, utility will ask you reboot system.
8. Reset system and press DEL key enter bios setup screen.
9. Select LOAD SETUP DEFAULTS, press ENTER, press Y, press F10, press Y
10. Finish update procedure.

APPENDIX B DRIVER INSTALLATION

If you are using Windows 98 SE, you do not need to install the 4-in-1 driver as the IRQ Routing Driver and the ACPI Registry are already incorporated into the operating system. Users with Windows 98 SE may update the IDE Busmaster and AGP drivers by installing them individually.

PART 1:

1. Put the CD into your CD-ROM.
2. There appears a welcome window.
(If doesn't, it means that your CD-ROM auto-run function does not enable, but you still can browser the CD via Windows Explorer and change the directory to where your CD-ROM directory is. Then run the **autorun.exe**)
3. Select "**Install Driver**".
4. Select "**Install VIA Chipsets Driver**".
5. Select "**Install 4in1 Driver**".
6. Then the program will automatically setup all drivers your system needs.
7. Finally, the system will re-boot.

NOTE: AFTER INSTALLED "4in1 Driver", USER DOESN'T NEED TO INSTALL ANY OTHER PROGRAM IN PART 2.

PART 2:

CAUTION!! ALL THE VIA MAINBOARD MUST INSTALL FOLLOWING 3 DRIVERS!!!

VIA Patch Code Installation

Windows95/Windows98:

1. Go to the CD-ROM disk, we suggest the CD-ROM title is D:\.
2. Find and run D:\Patch\Via\patch9x\Setup\Setup.exe
3. Select "Install VIA Chipset Functions' Registry", then it will automatically install this program.

Note! This program should be installed before any other VIA's drivers.

VIA AGP VxD Driver for Windows 9x Installation

Windows95/Windows98:

1. Go to the CD-ROM disk, we suggest the CD-ROM title is D:\.
2. Find and run D:\Driver\Via\Agp\Setup\Setup.exe
3. Select "Install VIA AGP VxD in turbo mode" or "Install VIA AGP VxD normal mode", then it will automatically install this program.

VIA PCI IRQ Routing Miniport for Windows 9x Installation


Windows95/Windows98:

1. Go to the CD-ROM disk, we suggest the CD-ROM title is D:\.
2. Find and run D:\Patch\Via\Virq9x\Setup.exe

Note: Before install Windows98, user must enable two functions for this miniport driver in the BIOS menu, one is "OnChip USB" in the "Chipset Features Setup" and another is "Assign IRQ for USB" in the "PNP/PCI Configuration Setup".

APPENDIX C THERMAL SENSOR

■ Thermal Sensor Connector

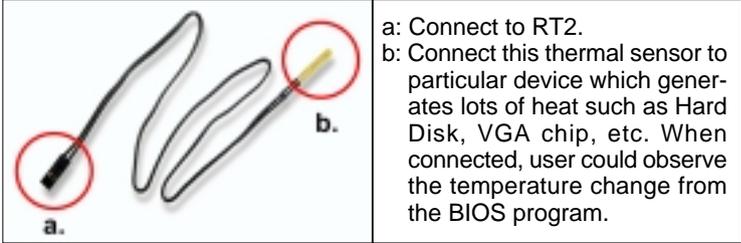

■ VIA Hardware Monitor Setup

1. Make sure that the CD is in the CD-ROM.
2. There will appear a welcome window, please use the mouse to choose **"Install Driver"** item.
(If not, that means user's CD-ROM autorun function is disabled, but user could still install the program via Windows Explorer.)
3. Choose **"Install VIA Chipset Driver"** item, then choose **"Install VIA Hardware Monitor"** item.
4. The setup program will install Hardware Monitor software automatically.